

Published: 16-Sep-2014

Information and Entertainment System - Information and Entertainment Display

Removal and Installation

Removal



CAUTION: Use a suitable trim tool.



NOTE: Removal steps in this procedure may contain installation details.

1. Disconnect the battery ground cable.


Refer to: [Specifications](#) (414-01 Battery, Mounting and Cables, Specifications).

2. Refer to: [Floor Console Upper Section](#) (501-12 Instrument Panel and Console, Removal and Installation).

3.



NOTE: Repeat the step for the other side.

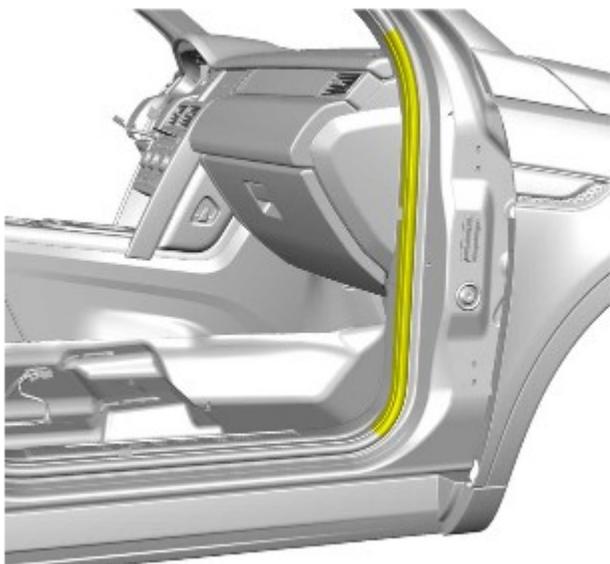


E168096


4.



NOTE: Repeat the step for the other side.

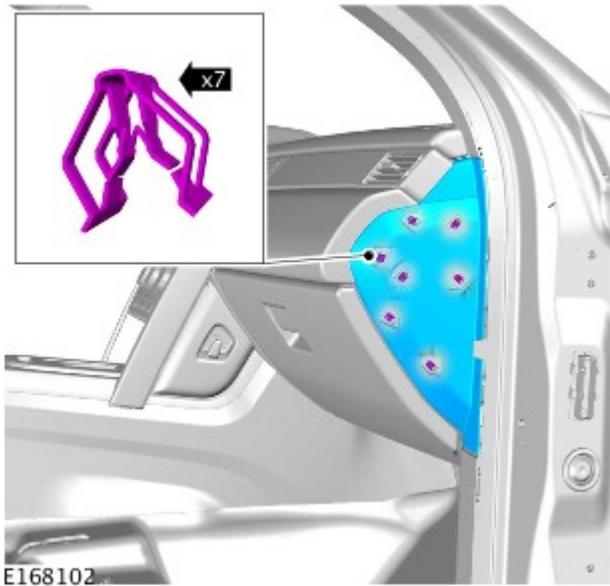

E168102

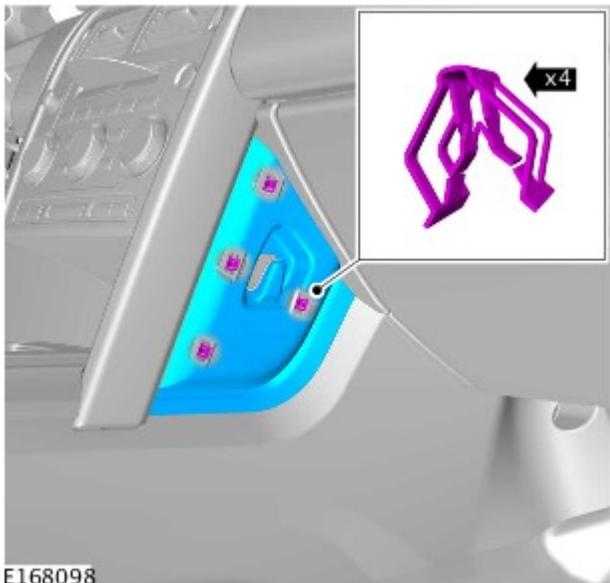


E168098

5.  NOTE: Repeat the step for the other side.



NOTE: Repeat the step for the other side.

Torque: 1.5 Nm

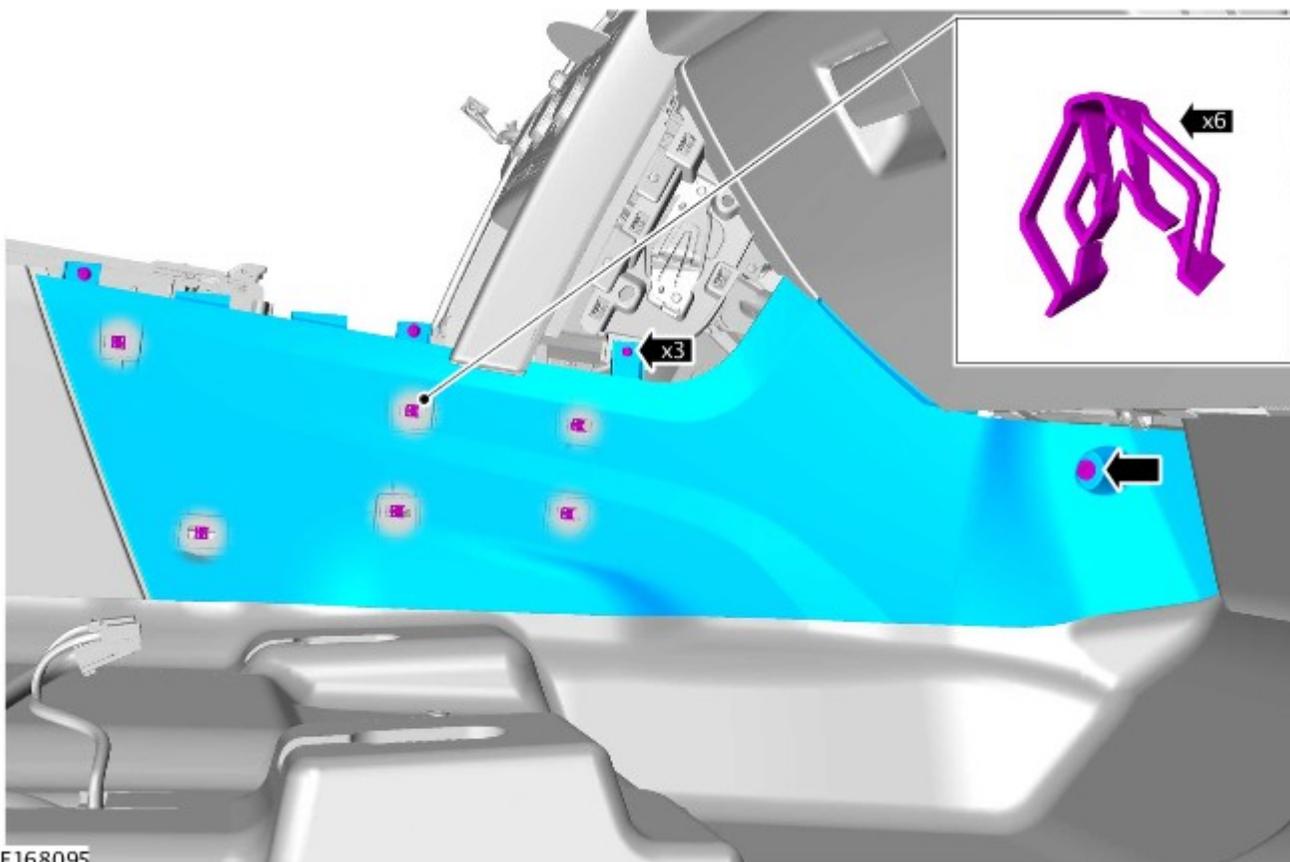


E168095

7.




NOTE: Repeat the step for the other side.

Torque: 1.5 Nm

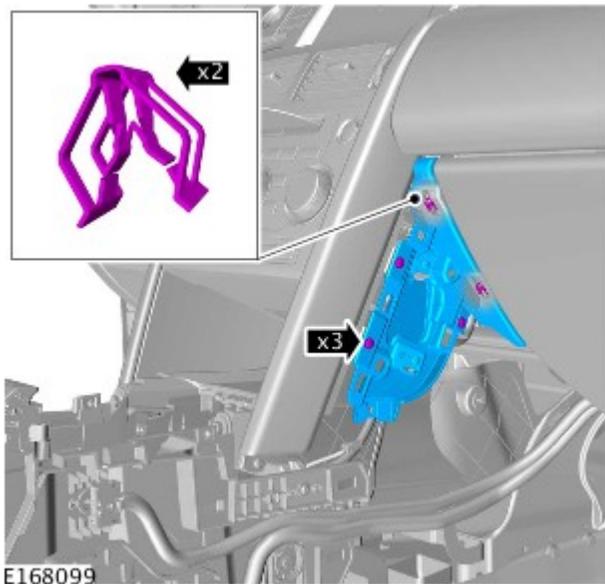


E168099

8. Torque: 6 Nm

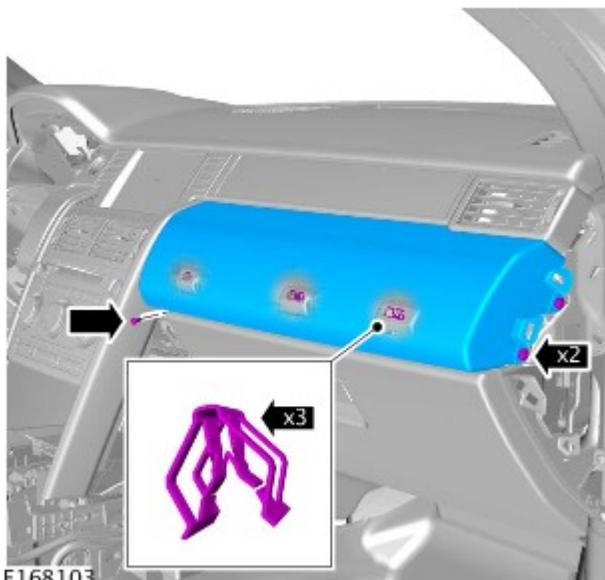

E168103


9. Torque: 6 Nm

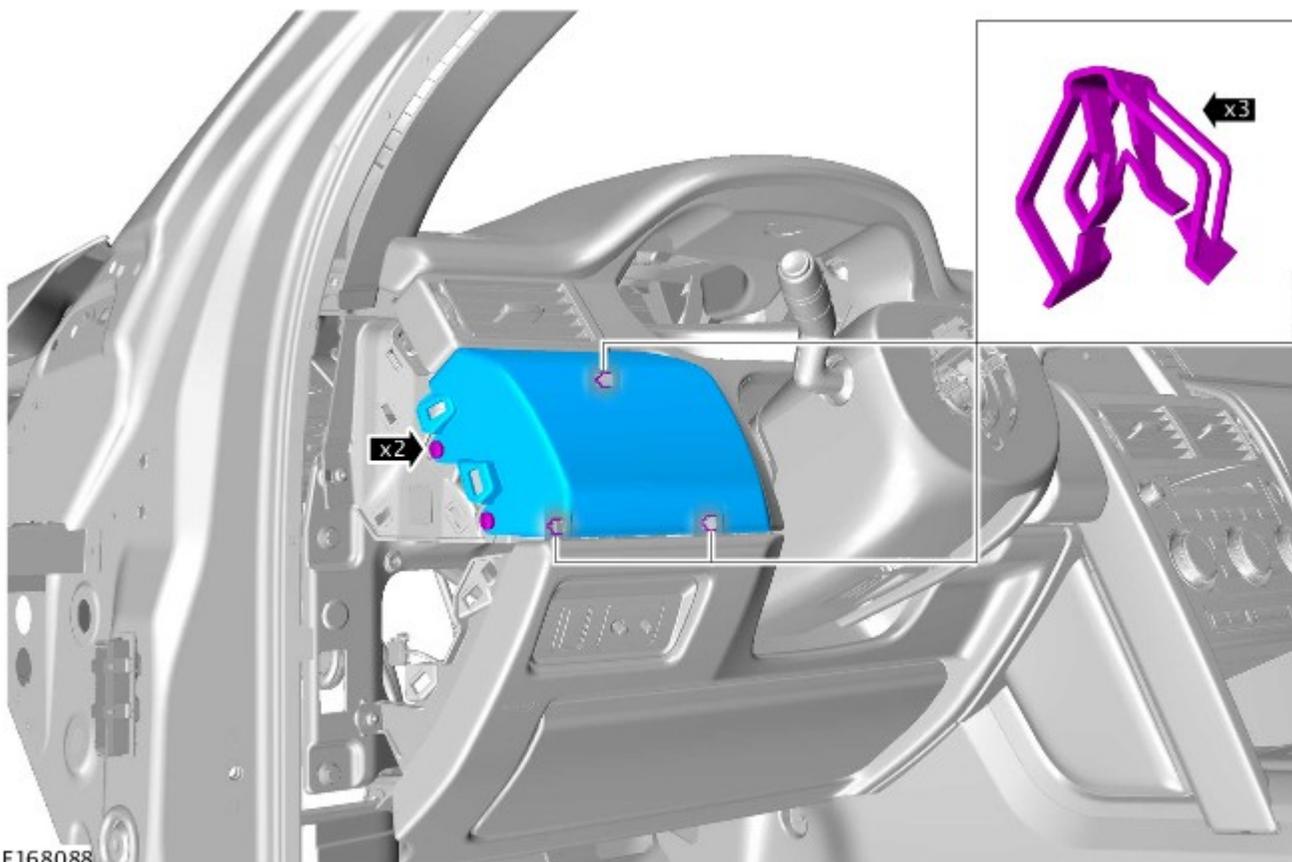

E168088


10.  NOTE: Repeat the step for the other side.

Torque: 1.5 Nm

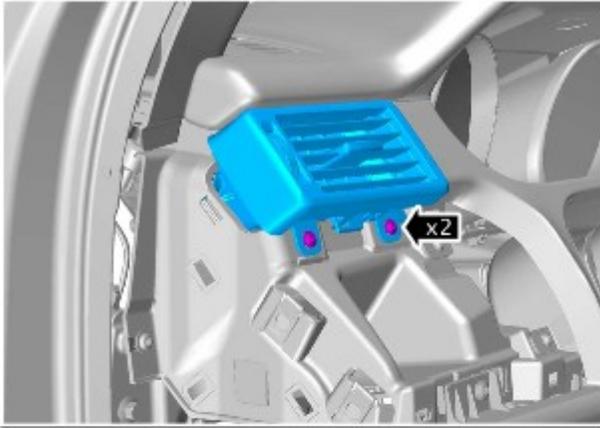



E168087

11. Torque: 1.5 Nm

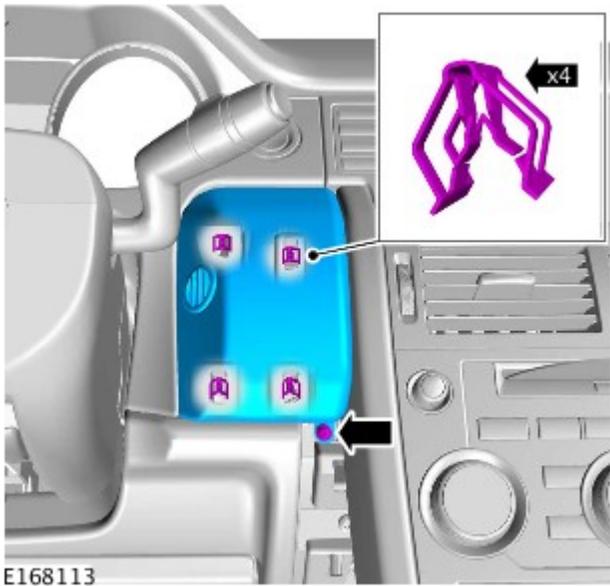

E168113

12. Torque: 1.5 Nm

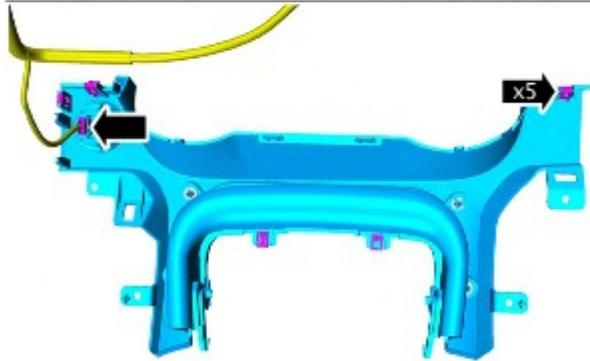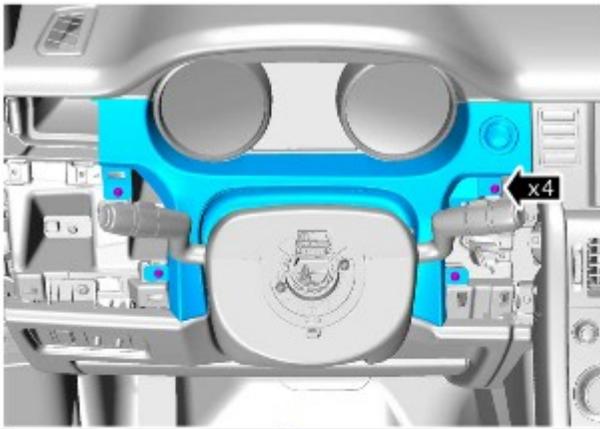


E168084



13.  CAUTION: Extreme care must be taken when removing and installing the trim. Excessive force may result in damage to the component.

 NOTE: Repeat the step for the other side.

Torque: 1.5 Nm

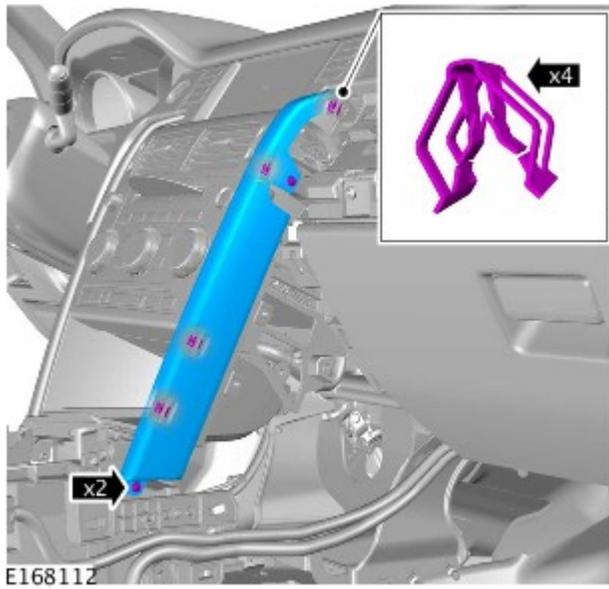


14. Torque: 1.5 Nm

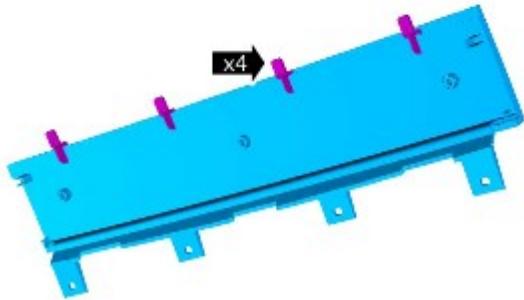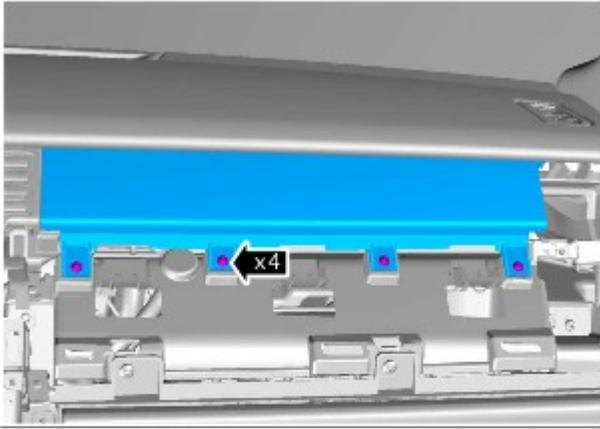


E168116

15. Torque: 1.5 Nm

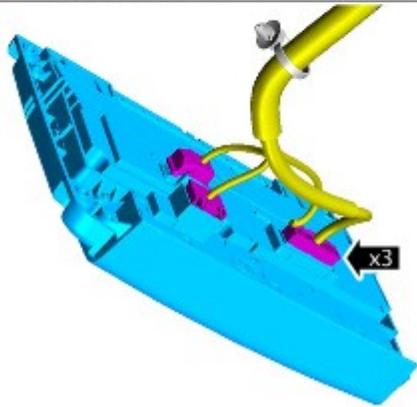



E168110

16. Torque:
Screws 6 Nm
M6 bolts 10 Nm

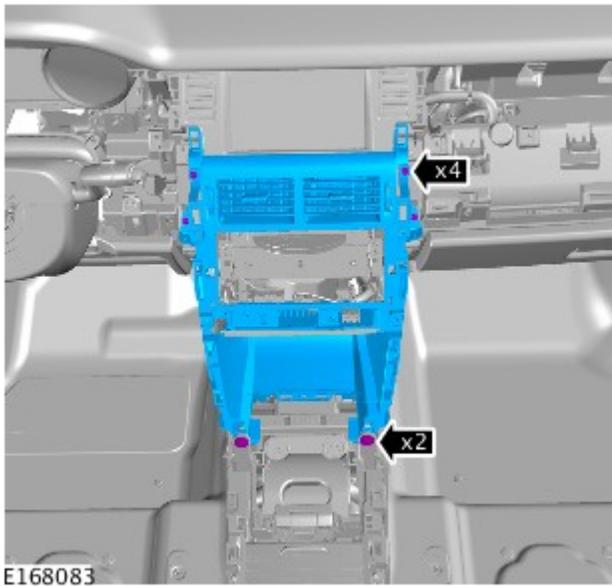



E168083

17. Torque: 1.5 Nm

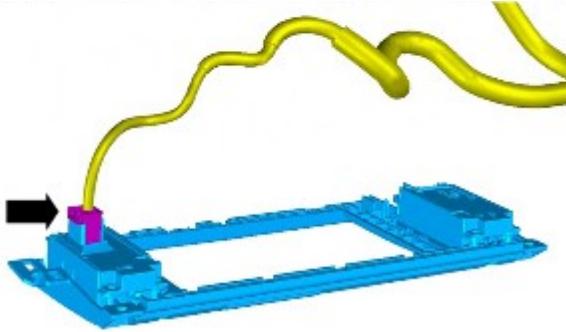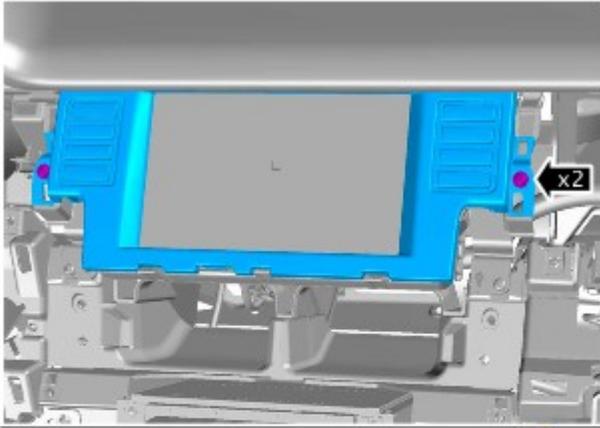

E168086

18. Torque: 6 Nm

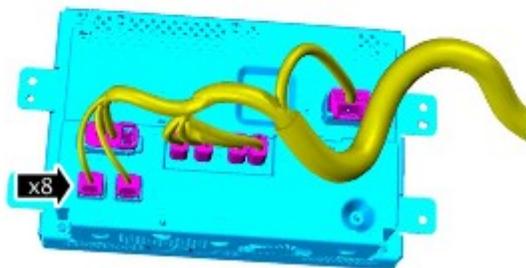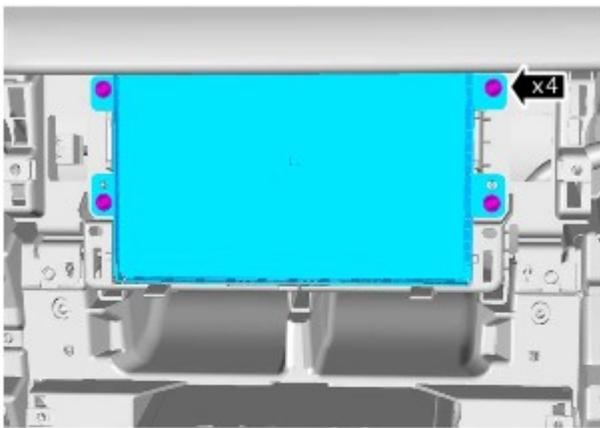

E168085

Installation

1. To install, reverse the removal procedure.
2. If a new component has been installed, configure using Land Rover approved diagnostic equipment.